




John Crane
Type EZ-1®
Sealol® Metal Bellows
Seal Assembly and
Installation Instructions

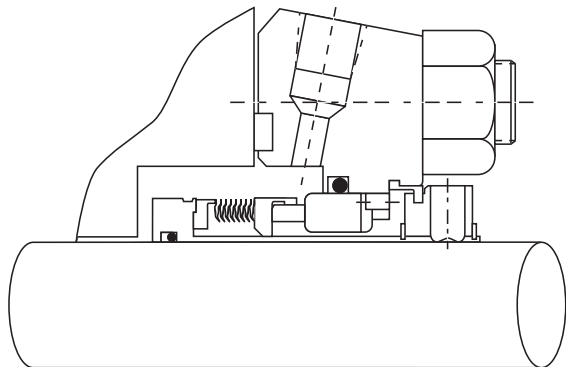

Foreword

These instructions are provided to familiarize the user with the seal and its designated use. The instructions must be read and applied whenever work is done on the seal, and must be kept available for future reference.

ATTENTION These instructions are for the installation and operation of a seal as used in rotating equipment and will help to avoid danger and increase reliability. The information required may change with other types of equipment or installation arrangements. These instructions must be read in conjunction with the instruction manuals for both the pump and any ancillary equipment.

If the seal is to be used for an application other than that originally intended or outside the recommended performance limits, John Crane must be contacted before its installation and use.

Any warranty may be affected by improper handling, installation, or use of this seal. Contact the Company for information as to exclusive product warranty and limitations of liability.

If questions or problems arise, contact your local John Crane Sales/Service Engineer or the original equipment manufacturer, as appropriate.


ATTENTION John Crane mechanical seals are precision products and must be handled appropriately. Take particular care to avoid damage to lapped sealing faces and to flexible sealing rings. Do not excessively compress the seal before or during installation.

Safety Instructions

1. The following designations are used in the installation instructions to highlight instructions of particular importance.

NOTE: Refers to special information on how to install or operate the seal most efficiently.

ATTENTION Refers to special information or instructions directed toward the prevention of damage to the seal or its surroundings.

 Refers to mandatory instructions designed to prevent personal injury or extensive damage to the seal or its surroundings.

2. Installation, removal, and maintenance of the seal must be carried out only by qualified personnel who have read and understood these installation instructions.
3. The seal is designed exclusively for sealing rotating shafts. The manufacturer cannot be held liable for use of the seal for purposes other than this.
4. The seal must only be used in technically perfect condition, and must be operated within the recommended performance limits in accordance with its designated use set out in these installation instructions.
5. If the pumped fluid is hazardous or toxic, appropriate precautions must be taken to ensure that any seal leakage is adequately contained. Further information on sealing hazardous or toxic fluids should be obtained from John Crane prior to seal installation.
6. Fluorocarbon components should never be burned or incinerated as the fumes and residues are highly toxic. If fluorocarbons are accidentally heated above 400°C/750°F, they can decompose. Therefore, protective gloves should be worn as hydrofluoric acid may be present.
7. PTFE components should never be burned or incinerated as the fumes are highly toxic.

Before Starting the Equipment

1. Check the pump at the coupling for proper alignment of the driver or motor.
2. Ensure that the gland plate nuts/bolts are securely tightened according to the pump manual instructions, and that all screws are securely fastened.
3. Complete the assembly of the pump, and turn the shaft (by hand if possible) to ensure free rotation.
4. Consult all available equipment operating instructions to check for correctness of all piping and connections, particularly regarding seal recirculation/flush, heating or cooling requirements, and services external to the seal.

ATTENTION This mechanical seal is designed to operate in a liquid so the heat energy it creates is adequately removed. Therefore, the following check should be carried out not only after seal installation, but also after any period of equipment inactivity.

5. Check that the seal chamber fluid lines are open and free of any obstruction, and ensure that the seal chamber is properly vented and filled with liquid - refer to the pump instruction manual.

ATTENTION Dry-running - often indicated by a squealing noise from the seal area - will cause overheating and scoring or other damage to the sealing surfaces, resulting in excessive leakage or a much shortened seal life.



Before start-up, ensure that all personnel and assembly equipment have been moved to a safe distance so there is no contact with rotating parts on the pump, seal, coupling, or motor.


Before Starting the Equipment (continued)

WARNING: Seal installation should be handled only by qualified personnel. If questions arise, contact the local John Crane Sales/Service Engineer. Improper use and/or installation of this product could result in injury to the person and/or harmful emissions to the environment, and may affect any warranty on the product. Please contact the company for information as to exclusive product warranty and limitations of liability.

General Instructions

1. Study the Engineering layout drawing to confirm the proper seal arrangement for the pump being used.
2. To assure satisfactory operation, handle seal with care. Take particular caution to see that the lapped sealing faces are not scratched or damaged.


Typical Type EZ-1 Seal Arrangement for Standard Seal Chambers

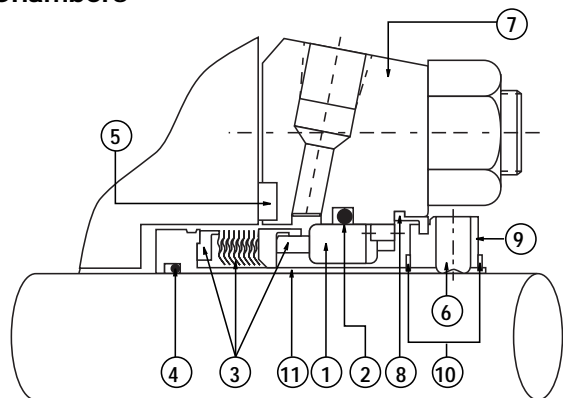

Part Name

1 Mating Ring	5 Gland Gasket	9 Locking Collar
2 O-Ring	6 Set Screws	10 Retaining Rings
3 Rotary Head Assembly	7 Gland Plate Assembly	11 Sleeve
4 O-Ring	8 Centering Bushing	

Type EZ-1 Seal Arrangement for Enlarged Seal Chambers

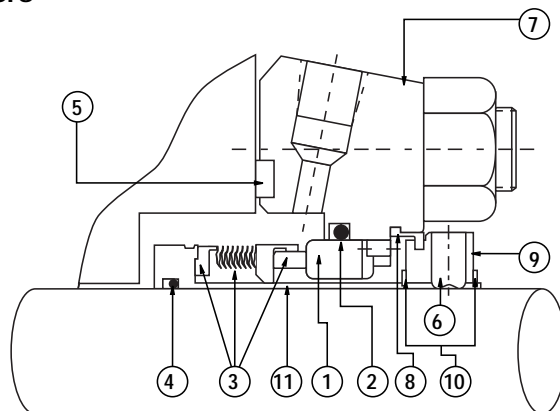

Part Name

1 Mating Ring	5 Gland Gasket	9 Locking Collar
2 O-Ring	6 Set Screws	10 Retaining Rings
3 Rotary Head Assembly	7 Gland Plate Assembly	11 Sleeve
4 O-Ring	8 Centering Bushing	

Type EZ-1 Dimensional Data (metric)

Shaft Size	A	B	C	D	E	F	G	H	J
28	42.8	49.2	60.3	60.3	17.4	42.9	61.9	14.3	111.1
33	49.2	52.4	60.3	60.3	17.4	39.7	61.9	14.3	106.0
35	49.2	52.4	60.3	60.3	17.4	39.7	61.9	14.3	106.0
38	55.5	58.7	69.8	69.8	19.0	42.9	71.5	14.3	130.2
40	58.7	61.9	71.4	71.4	19.1	42.8	73.0	14.3	133.4
43	61.9	65.7	79.4	79.4	19.1	42.9	81.0	14.3	133.4
45	61.9	65.1	79.4	79.4	19.1	42.9	81.0	14.3	133.4
48	65.1	68.3	82.6	82.6	19.1	42.9	84.2	14.3	136.5
50	68.2	71.4	82.6	82.6	19.0	44.5	84.2	17.4	139.7
53	71.4	74.6	88.9	88.9	22.2	42.9	90.5	17.4	138.0
55	71.4	74.6	88.9	88.9	22.2	42.9	90.5	17.4	138.0
60	80.9	84.1	96.8	96.8	25.4	41.3	98.4	17.4	158.8
65	87.3	90.5	109.5	109.5	30.2	41.2	111.1	17.4	177.8
70	92.1	95.2	114.3	114.3	27.0	41.2	115.9	17.5	190.0
75	98.4	101.6	122.2	122.2	28.5	42.1	123.8	20.6	196.9
80	104.8	108.0	125.4	125.4	28.5	42.1	127.0	20.6	190.0
85	108.0	111.1	125.4	125.4	31.7	42.1	127.0	19.1	203.2
100	128.6	131.8	154.0	154.0	34.9	42.1	155.6	22.2	228.6

Type EZ-1 Dimensional Data (inch)


Shaft Size	A	B	C	D	E	F	G	H	J
1-1/8	1.687	1.937	2.375	2.375	.687	1.687	2.437	.562	4.375
1-3/8	1.937	2.062	2.375	2.375	.687	1.562	2.437	.562	4.375
1-1/2	2.187	2.312	2.750	2.750	.750	1.687	2.812	.562	5.125
1-5/8	2.312	2.437	2.812	2.812	.750	1.687	2.875	.562	5.250
1-3/4	2.437	2.562	3.125	3.125	.750	1.687	3.187	.562	5.250
1-7/8	2.562	2.687	3.250	3.250	.750	1.687	3.312	.562	5.375
2	2.687	2.812	3.250	3.250	.750	1.750	3.312	.687	5.500
2-1/8	2.812	2.937	3.500	3.500	.875	1.687	3.562	.687	5.437
2-1/2	3.312	3.437	4.250	4.250	1.000	1.687	4.312	.812	6.250
2-5/8	3.437	3.562	4.375	4.375	1.187	1.625	4.437	.562	6.500
2-3/4	3.625	3.750	4.500	4.500	1.062	1.625	4.562	.750	7.000
3	3.875	4.000	4.812	4.812	1.125	1.658	4.875	.812	7.750
3-1/4	4.125	4.250	4.937	4.937	1.125	1.658	5.000	.812	7.480
3-1/2	4.375	4.687	5.625	5.625	1.250	1.656	5.687	.812	8.500

Type EZ-1 Dimensional Data for Enlarged Seal Chambers (inch)


Shaft Size	A	B	C	D	E	F	G	H	J
1-1/8	1.687	1.937	1.750	1.750	.687	1.687	3.312	.437	4.500
1-3/8	1.937	2.812	3.250	3.250	.687	1.562	3.437	.500	5.250
1-3/4	2.437	3.437	4.250	4.250	.750	1.687	4.562	.562	6.500
1-7/8	2.562	3.562	4.250	4.250	.750	1.687	4.437	.562	6.500
2-1/2	3.312	4.375	5.500	5.500	1.000	1.687	5.625	.750	8.000
2-5/8	3.437	4.375	5.375	5.375	1.312	1.625	5.437	.562	7.000

(Dimensional data in inches)

Type EZ-1 Standard Seal Chamber Version


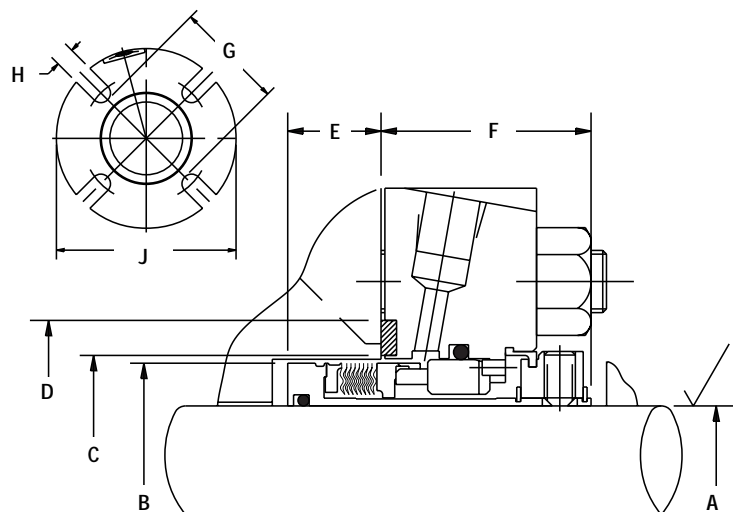


Type EZ-1 Enlarged Seal Chamber Version

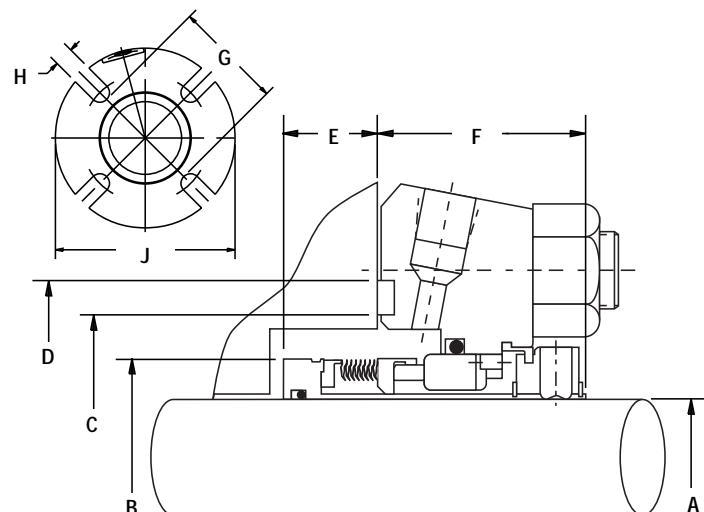


Preparing the Equipment


1. Check seal chamber dimensions and finishes.

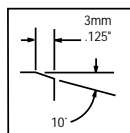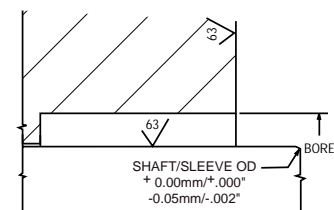


2. Measure axial end play (0.13mm/.005" F.I.M. max.).

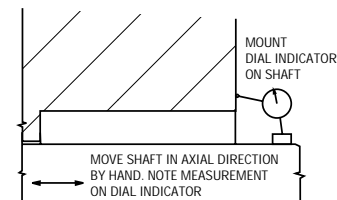

3. Determine squareness of seal chamber face to shaft (0.001mm per mm/.001" per inch of shaft diameter F.I.M. max.), and shaft concentricity to the seal chamber.

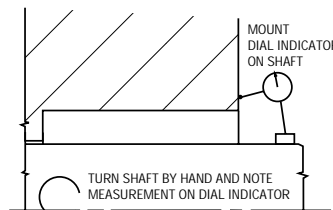

4. Measure shaft runout (0.001mm per mm/.001" per inch of shaft diameter F.I.M. max.).

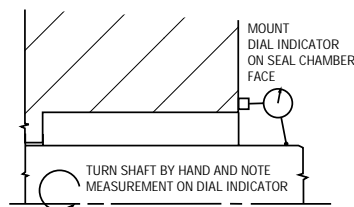

NOTE: If measured dimensions exceed those values given, correct the equipment to meet specifications prior to seal installation.

Installing the Seal in an Overhung Pump

1. Disassemble the seal chamber housing. Wipe the shaft/sleeve clean and apply a lubricant which is compatible with the sealed fluid and the o-ring material*. Take the complete cartridge assembly from its package. Do not disassemble or alter the unit.
2. Slide the complete cartridge assembly as far as possible onto the shaft/sleeve, towards the bearings. Be careful not to damage the o-ring inside the cartridge sleeve.
Reassemble the seal chamber housing and the impeller. Complete all required axial adjustments to the pump rotating assembly.
3. With the gland gasket in place, slide the complete assembly into position against the face of the seal chamber. Assemble the gland bolts finger tight. Continue tightening alternately until secure. Do not distort the gland by overtightening.
4. Tighten the cartridge sleeve set screws evenly. **Do not** remove the PTFE centering bushing.
5. Complete reassembly of the pump, frequently turning the shaft by hand to check for free rotation, if the shaft will not turn, the seal has been improperly set. Some frictional resistance, due to the centering bushing, is normal.

ATTENTION Refer to assembly drawing and/or pump manual for piping connections and coupling alignment. Proceed as indicated.

* Additional sleeve elastomers are provided. The o-ring can be changed prior to seal installation in order to meet your specific application requirements.

Installing the Seal Between Bearings

1. Disassemble the bearings and bearing housings. Wipe the shaft/sleeve clean and apply a lubricant which is compatible with the sealed fluid and the o-ring material*. Take both complete cartridges from their packages. Do not disassemble or alter the units.
2. Slide the complete cartridge assemblies onto the shaft/sleeves, being careful not to damage the o-rings inside the cartridge sleeves.
Reassemble the bearing housings and bearings, and complete all required axial adjustments to the pump rotating assembly.
3. With the gland gasket in place, slide the complete assembly into position against the face of the seal chamber. Assemble the gland bolts finger tight. Continue tightening alternately until secure. Do not distort the gland by overtightening.
4. Tighten the cartridge sleeve set screws evenly. **Do not** remove the PTFE centering bushing.
5. Complete reassembly of the pump, frequently turning the shaft by hand to check for free rotation, if the shaft will not turn, the seal has been improperly set. Some frictional resistance, due to the centering bushing, is normal.

ATTENTION Refer to assembly drawing and/or pump manual for piping connections and coupling alignment. Proceed as indicated.

* Additional sleeve elastomers are provided. The O-ring can be changed prior to seal installation in order to meet your specific application requirements.

Decommissioning the Equipment

1. Ensure that the equipment is electrically isolated.



If the equipment has been used on toxic or hazardous fluids, ensure that the equipment is correctly decontaminated and made safe prior to commencing work. Remember fluid is often trapped during draining and may exist outside the seal. The equipment instruction manual should be consulted to check for any special precautions.

2. Ensure that the equipment is isolated by the appropriate valves. Check that the fluid is drained and pressure is fully released.

Maintenance

No maintenance of a seal is possible while installed. Therefore, it is recommended that a spare seal unit and mating ring be held in stock to allow immediate replacement of a removed seal.

It is recommended that used seals are returned to a John Crane Seal Rebuilding Center, as rebuilding to as-new specifications must be carried out by qualified personnel.



It is the responsibility of the equipment user to ensure that any parts being sent to a third party have appropriate safe handling instructions externally attached to the package.

Quality Assurance

This seal has been assembled in accordance with John Crane Quality Assurance Standards and with proper maintenance and use will give safe and reliable operation to the maximum recommended performance as shown in any relevant approved John Crane publication.

Ordering Information

1. Cartridge Seal size = solid shaft or sleeve OD.
2. Determine whether seal chamber is standard or enlarged bore.

Materials of Construction - Standard

Bellows	Alloy 20 (UNS N08020)
Adaptive Hardware	316 Stainless Steel
Faces	Carbon vs. Silicon Carbide or Silicon Carbide vs. Silicon Carbide (Sintered Version)
Silicon Carbide	Glass-filled PTFE
Mating Ring Elastomer	PTFE Encapsulated Fluorocarbon
Sleeve Elastomer	Fluorocarbon O-ring
Additional Sleeve Elastomers In Package*	AFLAS [®] , EPR & PTFE Encapsulated Fluorocarbon

* Additional sleeve elastomers are provided. The o-ring can be changed prior to seal installation in order to meet your specific application requirements.

AFLAS is a registered trademark of Asahi Glass Co. Ltd.

Operating (non-concurrent) Limits

Process Pressure:	vacuum to 20 bar/300 psi
Process Temperature:	-30°C to +200°C/-20°F to +400°F
Shaft Speed:	25 m/s/4500 sfpm



Europe
Slough, UK

Tel: 44-1753-224000
Fax: 44-1753-224224

Latin America
São Paulo, Brazil

Tel: 55-11-3371-2500
Fax: 55-11-3371-2599

Middle East, Africa, Asia
Dubai, United Arab Emirates

Tel: 971-4-3438940
Fax: 971-4-3438970

North America
Morton Grove, Illinois USA

1-800-SEALING
Tel: 1-847-967-2400
Fax: 1-847-967-3915

smiths

A part of Smiths Group plc

For your nearest John Crane facility, please contact one of the locations above.

If the products featured will be used in a potentially dangerous and/or hazardous process, your John Crane representative should be consulted prior to their selection and use. In the interest of continuous development, John Crane Companies reserve the right to alter designs and specifications without prior notice. It is dangerous to smoke while handling products made from PTFE. Old and new PTFE products must not be incinerated.